

MODEL GLM #42SP

FOR YOUR SAFETY

If you smell gas:

1. Shut off gas to the appliance.
2. Extinguish any open flame.
3. If odor continues, immediately call gas supplier.

FOR OUTDOOR USE ONLY

FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other gas appliance.

THE LAMP HEAD MUST BE INSTALLED TO CONFORM WITH LOCAL CODES OR IN ABSENCE OF LOCAL CODES WITH THE NATIONAL FUEL GAS CODE ANSI Z223.1 – LATEST EDITION.

THE MINIMUM CLEARANCE FROM COMBUSTIBLE CONSTRUCTION IS 12" TOP BY 6" SIDE

LAMP INSTALLATION

1. Feed copper tubing through yoke and connect 1/4" flare connector valve at bottom of burner. (Loosen front setscrew beneath the bottom fitter to slide burner out for connection) Replace burner and tighten setscrew.
2. Lower lamp onto post.
3. Tighten set screws in bottom of yoke to secure lamp to post.
4. Install mantles (see mantle installation instructions)
5. Check all gas connections for leak, using soap solution. If air bubbles appear, shut off main gas line and tighten all fittings.
NEVER USE AN OPEN FLAME TO CHECK FOR GAS LEAKS!

MANTLE INSTALLATION

1. Install mantle over ceramic nozzle, gently pull down mantle for proper shaping. With gas turned off, hold a lighted match up to, but not touching, mantle to bum off protective coating.
2. Using a screwdriver, turn the gas valve to on position and hold a lighted match up to, but not touching, the mantle to light.
3. After the lamp has been burning for several minutes, use the screwdriver to adjust the flame with the on-off valve to its brightest, but containing the flame within the mantle.
4. Place globe down through top of lamp (careful not to touch burning mantles)
5. Mantles need to burn a minimum of 24hrs to burn at their brightest.

ROOF INSTALLATION

1. Place roof on top of lamp inner ring aligning the holes in the roof with the bracket holes that are attached to the inner ring of the lamp.
2. Place washer over holes and tighten screw on (l) side of lamp 3/4 way, then do the same on the opposite side of lamp. Tighten screws alternately until roof is secure. **(DO NOT OVER TIGHTEN)**
3. Attach ventilator assembly to top of roof and tighten with knurled screws to hold ventilator in place.

MAINTENANCE INSTRUCTIONS

No combustible material, gasoline or other flammable vapors or liquids should be stored near lamp. Nothing should obstruct the flow of combustion and ventilation air. Occasionally the glass will need to be cleaned with household glass cleaner and the mantles should be visually checked for condition and bum, replace mantles if necessary. Gas lamp parts and mantles are available from your local gas appliance dealer, or:

American Gas Lamp Works
101 Hoeveler St
Springdale, Pa 15144

724-274-7131 (phone)
724-274-7009 (fax)
www.americangaslamp.com

CAUTION: TURN GAS SUPPLY OFF AND WAIT FOR LAMP TO COOL BEFORE STARTING ANY REPAIRS. REMOVE AND CLEAN GLASS AND REPLACE BROKEN MANTLES AS NECESSARY.

INSTALLER: Please leave instructions with the appliance for the consumer to retain for future reference