



## **MANTLE CHANGING/LIGHTING INSTRUCTIONS**

1. Insert flathead screwdriver through the access hole in the lower collar of the lamp. Turn screwdriver to the right (to the 3:00 position) to turn off the gas.
2. Let the glass cool approximately 15-20 minutes.
3. Gently remove the glass by pushing the panel up with your fingers, then pull backward (toward you) and lower the panel from the bottom of the frame.
4. Carefully remove the old mantle(s) from the ceramic burner tip(s) by lifting the ceramic ring(s) up, give ¼ turn, and pull down. Discard the old mantle(s) and any debris lying in the bottom of the lamp.
5. Remove the new mantle(s) from the packaging and install onto the ceramic burner tip(s) by lifting the ceramic ring(s) up and giving ¼ turn. \*If using soft mantles, gently pull down to shape the mantle(s).\*
6. With the gas still **OFF**, light the mantle(s) by applying direct flame to the mantle(s); this is necessary to burn off the protective coating.
7. Once the protective coating burns off and the light goes out, insert a flathead screwdriver through the access hole in the lower collar of the lamp. Apply direct flame to the mantle(s) with a lighter or a match – be sure not to touch the mantle(s), as they are very fragile – and slowly turn the screwdriver to the left (towards the 12:00 position).
8. Once lit, turn the gas on full (to the 12:00 position) and replace the glass panel.

\*If you have any additional questions, please feel free to contact our Customer Support Team at 855-427-5483 x100 or [Sales@AmericanGasLamp.com](mailto:Sales@AmericanGasLamp.com).\*